


This washing machine is equipped with automatic safety functions which detect and diagnose at an early stage and react appropriately.

- H. "Temp." button
- I. "Detergent" button
- J. "Softener" button
- K. "Prewash" button
- L. "Extra Rinse" button
- M. "Quicker" button
- N. "Eco" button

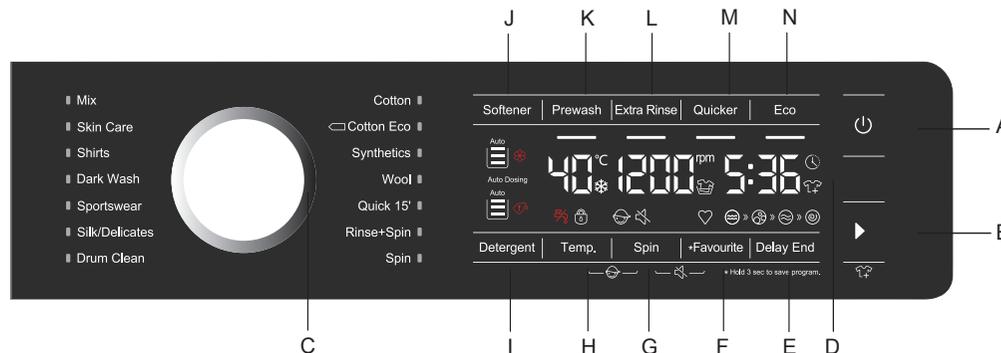

- A. "On/Off" button
- B. "Start/Pause" button
- C. Program selector
- D. Program and function status display window
- E. "Delay End" button
- F. "*Favourite" button
- G. "Spin" button

| Program | Care Label | Material / Level of Soiling | Maximum Wash Load kg | Wash Program Functions | | | | | | | | Maximum spin speed rpm |
|---|------------|--|----------------------|------------------------|---------|-------------|---------|-----|---------------------|-------|------------|------------------------|
| | | | | Delay End | Prewash | Extra Rinse | Quicker | ECO | Default rinse times | Temp. | spin speed | |
| Washing temperature selected as per the Care Label instruction. | | | | | | | | | | | | |
| Cotton --,20°C, 30°C, 40°C, 60°C, 95°C | | Heavily and moderately soiled cotton, or linen. For very heavily soiled items select the "Prewash" function. | 10.0 | * | * | * | * | * | 2 | * | * | 1400 |
| Cotton Eco (1) --,20°C,30°C,40°C,60° | | Eco wash for cotton and linen. Can reduce washing time and power consumption. | 10.0 | * | — | * | — | — | 2 | * | * | 1400 |
| Synthetics --,20°C,30°C,40°C,60°C | | Moderately soiled synthetics, cotton blended fabrics. | 4.0 | * | * | * | * | * | 2 | * | * | 1200 |
| Quick 15' --,20°C,30°C,40°C | | Cotton, mixed fabrics. Items worn for a short time or newly bought. | 1.0 | * | — | * | — | — | 1 | * | * | 800 |
| Silk/Delicates --,20°C,30°C,40°C | | Soft delicate fabrics and machine washable silk. (Refer to the washing label attached to the clothing). | 2.0 | * | — | * | * | * | 3 | * | * | 600 |
| Wool --,20°C,30°C,40°C | | Machine washable wool. (Refer to the washing label attached to the clothing). | 2.0 | * | — | * | * | * | 2 | * | * | 600 |
| Mix --,20°C,30°C,40°C | | Mixed loads of moderately soiled cotton and synthetic fabrics. | 4.0 | * | * | * | * | * | 2 | * | * | 1400 |
| Dark Wash --,20°C, 30°C,40°C,60°C | — | Dark textiles made of cotton and dark easy-care textiles. | 4.0 | * | * | * | * | * | 3 | * | * | 1000 |
| Skin Care --,20°C, 30°C, 40°C | — | Extra rinse time. Making sure no residual detergent on textiles to protect skin form irritability. | 4.0 | * | * | * | * | * | 3 | * | * | 1000 |
| Sportswear --,20°C, 30°C, 40°C | | Sportswear and leisure wear made from microfibre fabrics. | 2.0 | * | * | * | * | * | 2 | * | * | 1000 |
| Shirts --,20°C, 30°C,40°C,60°C | | Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics. | 4.0 | * | — | * | * | * | 2 | * | * | 1000 |
| Drum Clean 95°C | — | Program to remove dirt and bacterial residue that can breed in the machine after it has been used for a period, especially when low temperature washes are used regularly. | — | * | — | — | — | — | 1 | — | — | 600 |
| Rinse +Spin | — | This program is defaulted to two rinses and spin. | 10.0 | * | — | * | — | — | 2 | — | * | 1400 |
| Spin | — | Select the length, and speed, of the spin manually. | 10.0 | * | — | — | — | — | 0 | — | * | 1400 |

* : Optional Functions Yes : Detergent Required — : Cannot be selected -- : Temperature of unheated water

(1) The energy program Cotton Eco 40 C, 2 rinse times,1400 rpm shall be used for normally soiled cotton clothes. This is a requirement by gems application. (2) Dry powder detergent should be mixed with warm water (in all cases not just energy program).

| PARAMETER | |
|------------------|------------------------------------|
| Model | HWFE1014VA/HWFE1014VAS/HWFE1014VAT |
| Washing Capacity | 10.0kg |
| Max.spin speed | 1400rpm |
| Net Weight | 74kg |
| Dimension(WXDXH) | 595X660X845mm |
| Rated Voltage | 220-240V~ |
| Heating Power | 1600W |
| Washing Power | 150W |

Add Detergent, Close the Door and Set the Program

Load the clothes to be washed in the drum and close the door. Add the detergent into the relevant compartments for the type of program you are going to select. Add detergent as described in **Auto Dosing operation guide**.

- 1.Press the **“On/Off”** button.
- 2.Press program selection button to required program, start up and default the program as **“Cotton”**.
- 3.Select washing temperature and spin speed by pressing **“Temp.”** and **“Spin”** buttons.
- 4.Press **“Prewash”**, **“Extra Rinse”**, **“Quicker”**, **“Eco”** button to select additional functions.
- 5.After starting the program, display window displays program length (hours: minutes), washing temperature and additional function options in sequence.

Addition function selection

At standby state, press **“Prewash”**, **“Extra Rinse”**, **“Quicker”**, **“Eco”** button to select additional function for current program. Select the function , and then corresponding icon lights up. After starting up, program cannot be changed.

Pre-wash

Select the function to conduct pre-wash so as to enhance washing effects and better remove stains. This function is suitable for heavy dirt clothes.

ECO

- The ECO indication lamp is on after the function is selected, and the indication lamp will be off after the program ends.
- The ECO function is only added under the standby state of its applicable program, that is, before the program is started. After the program is started, the function cannot be selected.
- The actual temperature be reduced by 5 C and the main wash time be reduced after the function is selected.

Extra Rinse

After set the function of Extra Rinse, the program runs the rinsing process once again before running the softening, and the total running time of the program increases accordingly.

Quicker

After pressing this function button,the program time will be shortened according to the setting,and the program time will be increased back to the original setting by pressing the Quicker button again.After the program starts,the indicator light is always on.

This function is only added under the standby state of its applicable program, that is, before the program is started. After the program is started, the function cannot be selected. After this function is selected, the determined main washing time will be reduced by 15 mins.

Inlet water warning

If tap is not opened, or water pressure is over low, inlet water fault icon will display, and display screen will prompt **“F01”** to give alarm.

Drainage warning

If the pipe is squeezed, drainage will not be smooth. In case of failing to completely drain for long time, drainage fault icon will display, and display screen will prompt **“F03”** to give alarm.

Door Lock Icon

After the program starts the Door Lock icon will light up and the door will be locked.

- After completing program, door lock unlocks automatically.
- During pause, if door opening condition can be met halfway, the door lock will unlock and its indicator light will go out.
- When door lock indicator light flashes, door shall not be opened forcibly so as to avoid personal injury.

Delay End Function

Delay End function allows to run the machine at the consumers' convenience, for example, at night when electricity is cheaper.

- Only under the standby mode, this button is valid for selecting the reservation time.
- After the reservation function is selected, the time will increase 1h when each time the reservation button is pressed. Before reservation, if the program time does not satisfy the integral multiple of 1h, it shall be completed by pressing the reservation key for the first time, and then the time increases 1h when each time the reservation button is pressed. If the reservation is selected, before the program runs, the current reservation can be canceled by turning the button to select other programs.
- The delay time must be longer than the wash program length as the delay time is the time program will finish. For example: if the selected program time is 02:28, the delay time selected must be between 03:00 and 24:00.
- When the reservation process is operated, the icon of 'reservation time' will be on. When the reservation process startup, the icon of 'reservation time' will flash.
- Long press the Delay End button,the reservation time jumps fast.

Mute Function

When the machine is in the state of holding, pause or operation, press **“Spin+Favourite”** buttons for 3 seconds, the Mute icon will light up. All the buzzing will be turned off except the alarms.

When the machine is in the mute state, press **“Spin+Favourite”** buttons for 3 seconds, the Mute icon will turn off. All the buzzing will be activated.

Favourite

- 1.Press the **“On/Off”** button to turn on the machine;
- 2.Select the washing program;
- 3.Select parameters(washing temperature ,spin speed,etc);
- 4.Press Favourite button for 3 seconds;
- 5.Favourite is stored(only one program can be stored),select Favourite when using this program.press **“Start / Pause”** to start;
- 6.When the user uses it for the first time, if he/she has never long pressed the Favorite button to collect programs, he/she can short press the Favorite button and then the cotton linen program and its default settings will be collected by default;
- 7.Short press Favourite button,then the symbol is on.Repeat the same operation or press other buttons to exit this program, the symbol is off;
- 8.After selecting other functions,long press 3 seconds to override the original program.

Automatic weighting

Washing machine displays **“--”** after startup, indicating that it is weighing automatically. It will adjust program length (hours: minutes) automatically according to weight of clothes.

Child Lock

To strengthen the safety of children, this machine is equipped with Child Lock function.

When the programme starts, press **“Temp.+Spin”** button for 3 seconds. Child Lock icon will light up, and then Child Lock is set up. Repeat the same operation, the Child Lock will be released.

- When the Child Lock is set, all function buttons will be shielded.
- When you turn the machine off by pressing the **“On/Off”** button, child lock is released.
- After completing program, child lock will automatically unlock.

To Start the Program

After you have selected your options and placed detergent within the detergent dispenser, turn on the water tap and press the **“Start / Pause”** button. The screen will display the current program progression with icons from left to right. It also displays the remaining program time.

To Cancel the Program or Reselect the Options

- 1.Press the **“On/Off”** button for 2 seconds to turn off the machine.
- 2.Press the **“On/Off”** button to turn on the machine. Select the new program and options.
- 3.Press **“Start / Pause”** to start the new program without adding any extra detergent.

End of the Program

When programme finished its running, it will display **“End”**. If no operation is taken in 2 minutes, the machine will turn off automatically.

- 1.Press **“On/Off”** button for 2 seconds to turn off the machine;
- 2.Close the tap;
- 3.Open the door and take the washed clothes out;
- 4.Slightly open the door to remove moisture in the drum.

Reload in Process

If you want to reload clothes in the process of washing, please press **“Start/Pause”** button.

- If reload icon  light up, the door can be opened in the process, remaining time and the Door Lock icon in display will flash. Then the Door Lock icon will go out, and the door can be opened.
- If reload icon  doesn't light up, the Door Lock icon doesn't flash, it indicates that current temperature is over 50 C or you have passed the time for reloading in the process, namely no clothes allowed to load into the machine.

Softener /detergent release

- 1.Select to turn on or off softener/detergent release and set the release volume;
- 2.It is active in the standby mode. After this key being pressed, the softener/detergent volume will be selected in a cycle mode in accordance with Automatic—Large—Medium—Little—off;
- 3.The softener/detergent release selection will be memorized, that is, after selection and operation by the user, the release volume for the next time will be that of selected in the last time;
- 4.When the user uses the machine for the first time, it is defaulted that the softener/detergent release is turned on and the release volume is automatic;
- 5.When the softener/detergent release is turned on, if it is detected that the amount of softener/detergent in the release box is too small, the softener adding indicator on the display will be turned on, and the selected volume indicator will flash in a frequency of 2 Hz.