


海信容声(广东) 冷柜有限公司		卧式冷冻柜系列 使用说明书				重要度	[B]
						共	页 第 0 页
<p>产品名称及型号 <u>卧式冷冻柜系列</u></p> <p>文件名称 <u>使用说明书</u></p> <p>文件编号 <u>L08061492</u></p> <p>技术要求 <u>A5版双胶纸(145*210±2)</u></p> <p>技术要求:</p> <p>1. 有害物质含量满足冷柜公司企业标准Q/HKB J 16001《零、部件及原材料中有害化学物质含量的规定》的要求</p> <p>2. 首样经技术人员确认过方可批量生产。(黑白印刷)</p> <p>3、防火标签高度至少为15mm高;</p> <p>4、第1-6页正文内容字体大写字母高度至少要有3mm高。</p> <p>C版：更改第3页警示语内容，14页产品尺寸及封底版本号</p>							
描 校							
描 写							
旧底图总号	2037696	BD-520/BHC(ES)-00HIS.AUS01					
底图总号	物料号	首次使用型号		原物料号	原图号		
签 字					资 料 来 源	编 制	何夏琴
日 期					提出部门	校 对	
	标记	处数	更 改 文 件 号	签字	日期	批 准	
					批准文号		

Hisense

USER'S OPERATION MANUAL

MODEL:HR6CF523

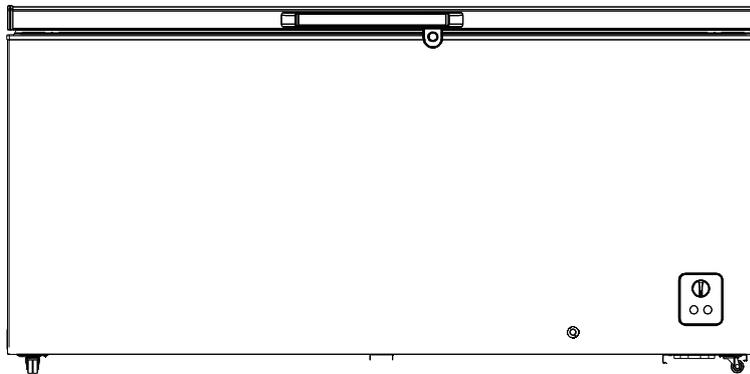

Before operating the unit, please read this manual thoroughly and retain for future reference

CONTENTS

SAFETY AND WARNING INFORMATION _____	1-6	PART NAMES AND FUNCTIONS _____	13
DISPOSAL OF THE APPLIANCE _____	7	TEMPERATURE ADJUSTMENT AND SPECIFICATIONS _____	14
SAFETY PRECAUTIONS _____	8-10	TROUBLESHOOTINGS _____	15
HOW TO USE _____	11		
CLEANING _____	12		

SAFETY AND WARNING INFORMATION



For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life will be properly informed on usage and safety notices. For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Safety for children and others who are vulnerable

- According to EN standard
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- According to IEC standard
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- Keep all packaging away from children as there is risk of suffocation
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child

General safety



This appliance is intended to be used in households and similar applications such as -staff kitchen areas in shops, offices and other working environments;

-farm houses and by clients in hotels, motels and other residential type

environments;

-bed and breakfast type environments;

-catering and similar nonretail applications

- WARNING — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- WARNING —If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING — Keep ventilation openings in the appliance enclosure or in any built-in structure clear of obstruction.
- WARNING — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING — Do not damage the refrigerant circuit.
- WARNING — Do not use

electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- WARNING — The refrigerant and insulation are flammable. When disposing of the appliance, do so only at an authorized waste disposal center. Do not expose to flame.
 - WARNING —When positioning the appliance, ensure the supply cord is not trapped or damaged.
 - WARNING —Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
 - WARNING —Damaged supply cord must be replaced by a special cord or assembly or its service agent.
- available from the manufacture

Replacing the LED light:

- WARNING — The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance.

Refrigerant

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the

appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.

During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.

It is hazardous for anyone other than an Authorized Service Person to service this appliance.

In Queensland the authorized Service Person MUST hold a Gas Work Authorization for hydrocarbon refrigerants to carry out servicing or repairs which involve removal of covers.

- WARNING — Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.



Caution: risk of fire

If the refrigerant circuit is damaged:

- Avoid naked flames and sources of ignition.
- Thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a short circuit, fire, and/or electric shock.

Electrical safety

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only supplied with power supply of single phase alternating current of 220 ~ 240 V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C.

Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of common one with other electric



appliances. Its plug must match the socket with ground wire.

Daily use

- Do not store flammable gas or liquids in the appliance. There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains socket, do not pull on the cable.
- Do not place hot items near the plastic components of the fridge.
- Do not place food products directly against the air outlet on the rear wall.
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.
- The manufacturer's storage recommendations should be

strictly adhered to. Refer to relevant instructions for storage.

- Do not place carbonated or fizzy drinks in the freeze compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- Frozen food can cause frost burns if consumed straight from the freezer compartment.
- Do not place the appliance in direct sunlight.
- Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
- The appliance is intended for keeping food and/or beverages in normal households as explained in this instruction booklet. The appliance is heavy. Care should be taken when moving it.
- Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or

frost/freezer burns.

- Never use the base, drawers, doors etc. to stand on or as supports.
- Frozen food must not be refrozen once it has been thawed out.
- Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
- To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.

Caution!

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.

Installation important!

- For electrical connection carefully, follow the instructions given in this manual.
- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be allowed around the appliance reducing the risk of overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the back

of the product should not be close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation

- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person. This product must be serviced by an authorized Serviced Center, and only genuine spare parts must be used.

DISPOSAL OF THE APPLIANCE

Disposal of the appliance

It is prohibited to dispose of this appliance in domestic household waste.

Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging in a suitable waste collection container to recycle it.

Before disposal of appliance.

1. Disconnect the main plug from the main socket.
2. Cut off the main cable and discard it.

	Correct disposal of this product
	<p>This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the store where you purchased the product.</p>

INSTRUCTION MANUAL

SAFETY PRECAUTIONS 1





To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the appliance.

The purpose of the safety precautions in this manual is to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the ⚠ WARNING heading. However, the cases listed under the ⚠ CAUTION heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.

⚠ WARNING Improper handling of the unit could lead to death or serious injury.

Text set off by the exclamation mark **!** contains information that should be strictly adhered to. After reading the instruction manual, store it in an easily accessible place where the user(s) of this appliance can easily find it.







PRECAUTIONS FOR USE

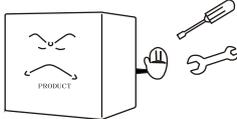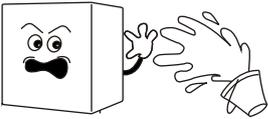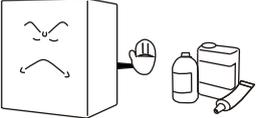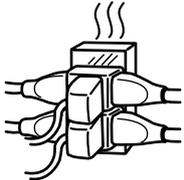⚠ WARNING	
 <p>DONT TAMPER</p> <p>All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.</p> 	 <p>ELECTRICAL SHOCK HAZARDS</p> <p>Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.</p> 
 <p>DANGER OF EXPLOSION</p> <p>Never put flammable or volatile substances into the unit as explosion and fire could result.</p> 	 <p>PROHIBITED</p> <p>Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire.</p> 
 <p>PROHIBITED</p> <p>Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.</p> 	 <p>FLAMMABLE</p> <p>Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.</p> 

INSTRUCTION MANUAL

SAFETY PRECAUTIONS 2

⚠ WARNING
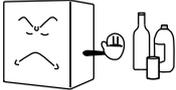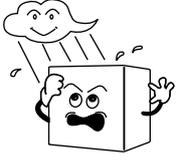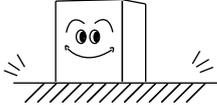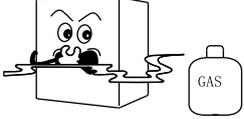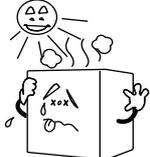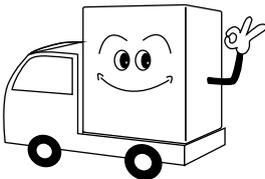
<p> Do not store bottles and cans in the unit. The contents could freeze and the containers break causing injury.</p> <p></p>	<p> The unit is intended for storage of frozen foods. Storage of items other than the intended could have an adverse affect on the items stored in the unit.</p> <p> Frozen foods</p>
<p> For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.</p> <p></p>	<p> Never place heavy objects or items containing water on top of the unit. Containers filled with Water could fall and cause injury. Furthermore, the spilled water could deteriorate the insulation of electrical components and result in electrical leakage.</p> <p></p>
<p> Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and cause personal injury.</p> <p></p>	<p> CAUTION AGAINST EXPLOSION</p> <p>If you find a gas leakage, please don't touch the chest freezer, and close gas and open the door for ventilation. A gas leakage could cause an explosion, fire, and injury.</p> <p></p>
<p> When you dispose of refrigerators and freezers remove any doors. Children can suffocate if they get trapped inside. This refrigerator contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance. Please contact your local council and seek an environmentally friendly solution.</p>	<p> Keep away from hot air sources Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.</p> <p></p>
<p> Leave disassembly and disposal of the unit to qualified experts.</p> <p></p>	<p> When not in use please store the unit in a location away from children. Please take necessary precautions to keep the door opened to avoid accidental entrapment inside the compartment.</p>

INSTRUCTION MANUAL
SAFETY PRECAUTIONS 3

⚠ CAUTION

Sufficient ventilation is required to ensure your freezer operates at optimum high efficiency and with lowest possible power consumption, Therefore you are required to place your appliance in a position with adequate clearance. We recommend you place your appliance at 100mm away from the wall to the back of your appliance, 200mm from the side clearance and 300mm from the top of your appliance. A clearance space of 160 degrees is required for the appliance door.




If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.




Never hang from the door or climb onto the unit.

PROHIBITED

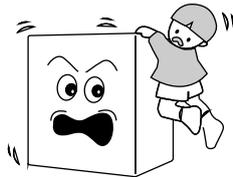


DISCONNECT
 POWER CORD
 PLUG FROM
 WALL OUTLET

Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

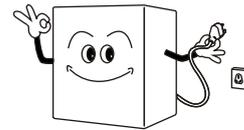


Never touch the power cord plug, other electrical components, or operate the switch with wet hands. Electrical shock could result.

PROHIBITED

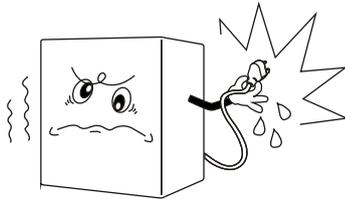


PROHIBITED


Never use if the power cord or plug is damaged or the plug cannot be firmly seated in the receptacle sockets as electrical shock, short-circuit and fire could result.

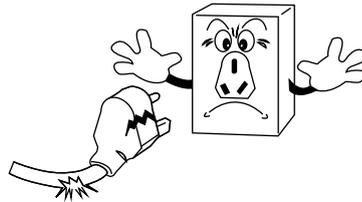

When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, causing overheating and fire.

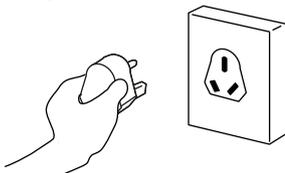

Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

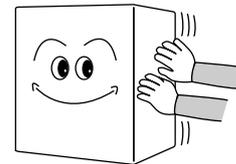

INSTRUCTION MANUAL

HOW TO USE

BEFORE USE

Remove shipping packaging, tape, etc. and leave the lid open for ventilation for a while. The unit is cleaned before shipment. However, clean the compartment interior once after delivery. Following installation, refrigeration will start about 10 minutes after operation is started. Operate for about 2 hours to cool the freezer compartment before placing items in the freezer.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.


DEFROSTING

When 5mm of frost forms in the freezer, for maximum efficiency defrosting is required, you could shave off the excess or defrost completely. If you defrost completely, please do as follows:

- 1.) Empty the contents & disconnect the power cord;
- 2.) Shaving the frost whilst thawing will shorten the defrost time;
- 3.) Then drain, wipe & clean the inside with a soft cloth.



Do not use a hammer, knife or bottle to chisel any part of the freezer. Use a plastic scraper to prevent damaging the inside lining and evaporator.

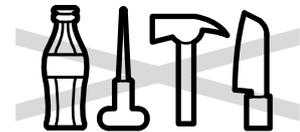

INSTRUCTION MANUAL

CLEANING



To prevent any electrical shock hazards or injury, always disconnect the power cord plug from the wall outlet before cleaning.


1 EXTERIOR AND COOLER COMPARTMENT

Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then dry off with a clean moist cloth.



WARNING: Do not splash water directly onto the freezer and do not wash with water. Short-circuit and electrical shock could result.

For maximum efficiency keep the freezer clean at all times. To prevent damage to plastic parts and lacquer coating do not clean your appliance with hot water diluent, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid, chemical cloth, etc.

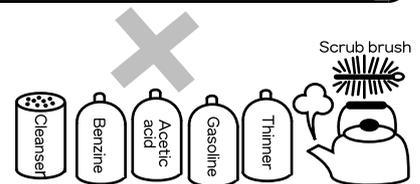

IN CASE OF THE FOLLOWING

1 POWER FAILURE

Sudden power failure

Keep opening and closing of the door to a minimum to prevent cold air from escaping from the freezer compartment. Covering exterior glass surfaces with a blanket, etc. will further help to maintain a low temperature.

Announced power suspension

In case of a long power suspension, place dry ice in the freezer compartment.

Keep opening and closing of the door to a minimum.

Avoid placing new items in the freezer as this will raise the temperature inside the compartment.

2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the compartment and disconnect the power cord plug from the wall outlet.

Clean the compartment interior and wipe away all water. To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

3 WHEN NOT USED TEMPORARILY


Clean the compartment interior and wipe away all water.

Place an object in between the door and outer casing to prevent the door from closing.

Keep children away from playing with the unit - entrapment could result.

PART NAMES AND FUNCTIONS

Model NO: HR6CF523

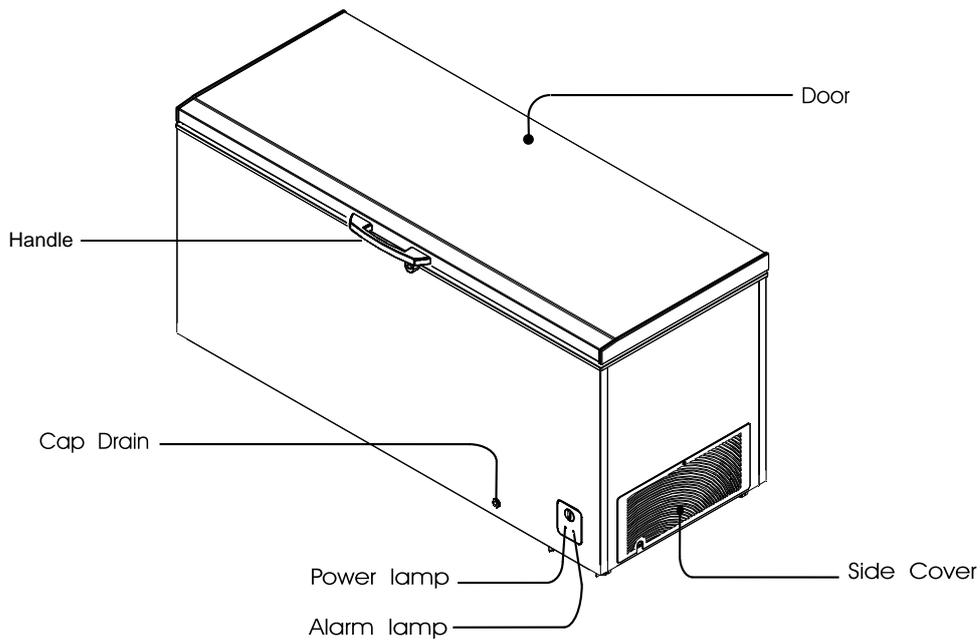


Never touch the interior of the Freezer Chamber or frozen foods in the compartment with wet hands as this could result in frostbite.



The above image is for reference only, configuration is subject to actual product.

TEMPERATURE ADJUSTMENT

- To adjust the temperature inside the freezer compartment, adjust the temperature control dial on front-bottom side of the chest freezer. Normally use chest freezer with temperature MID.
- If the cooling performance is inadequate, turn the temperature control dial in the direction of MAX. If too cold, turn dial in direction of MIN.
- When you stop running temporarily, please turn the temperature control dial in the direction of 0.

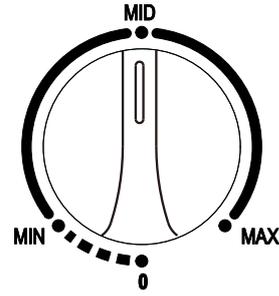

SPECIFICATIONS

Product Name	Chest Freezer		
Product No.	HR6CF523		
Net Capacity	521L		
Outer Dimensions (mm)	Length	Height	Width
	1730	852	767
Performance	Freezer compartment temperature: -18 °C ; Conditions: Ambient temperature ST/38 °C (T/43°C), unloaded state, not exposed to direct sunlight.		
Net Weight	70kg		



The specifications may change, please refer to the circuit name plate on the back of your chest freezer.

INSTRUCTION MANUAL

TROUBLESHOOTINGS

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the freezer to another freezer. Then contact the service provider listed in the warranty card, and be ready to provide information as listed in "REQUIRED INFORMATION" below.



To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

CAUTION

No refrigeration at all	<p>Is the power supply interrupted? Is the power cord plug disconnected from the wall outlet? Are the power fuses blown and/or the circuit breaker activated? The temperature control dial in the direction of Colder.if too cold,turn dial in direction of Off?</p>
Inadequate refrigeration	<p>Is the place of installation badly ventilated? Is the freezer exposed to direct sunlight, placed near a heater or stove? Are the lids opened and closed frequently? Are items stocked beyond the load line? The temperature control dial in the direction of Colder.if too cold,turn dial in direction of Cold? Much frost forms in the chest freezer?</p>
Excessive noise	<p>Is the floor underneath the freezer sturdy enough? Is the unit shaking and rattling? Is the rear panel of the unit contacting a wall, etc.? A container or something is behind the chest freezer? The compressor will generate a rather loud sound for a while after operation is started. The noise will cease together with refrigeration.</p>
Condensation on cooler exterior	<p>Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.</p>
The circumference of chest freezer feels hot	<p>Especially in warmer conditions or startup, the circumference of chest freezer feels hot. This is because the chest freezer incorporates a pipe for radiating and preventing condensation. The heat does not affect the contents in the freezer.</p> <div style="text-align: right; margin-top: 10px;">  </div>

This appliance will sometimes stop running when the thermostat turns off.

REQUIRED INFORMATION

- | | | |
|---|----------|-----------------------------|
| <p>① Nature of malfunction
(as accurately as possible)</p> <p>② Product number</p> <p>③ Serial number</p> | <p>}</p> | <p>(inscribed on badge)</p> |
| <p>④ Customer's name, address, phone number</p> <p>⑤ Year and date of purchase</p> | | |

HISENSE LIMITED PTY

Refrigerator, Freezer, Clothes Washer & Clothes Dryer Manufacturer's Warranty – Australia & New Zealand

Congratulations on your purchase of a new Hisense Refrigerator, freezer, Clothes Washer or Clothes Dryer. This Refrigerator, Freezer, Clothes Washer or Clothes Dryer Manufacturer's Warranty – Australia & New Zealand (Warranty) sets out the terms and conditions on which Hisense will repair or replace defective fridges, washing machines & dryers. This Warranty applies in addition to your rights under the Australian Consumer Laws (for Australian customers) or the Consumer Guarantees Act 1993 (for New Zealand customers) and is not intended to limit those rights.

What is covered by the Warranty?

1. The Warranty automatically applies to any new Hisense fridge, washing machine & dryer that is manufactured for use and purchased in Australia or New Zealand (**Product**) from a company or person that is authorised by Hisense to sell the Product (**Authorised Retailer**).
2. Subject to the terms of the Warranty, Products are warranted to be **free from defects in materials and workmanship (defects)** for the applicable time period specified below (**Warranty Period**).
3. During the Warranty Period, Hisense will repair or replace, at its option and cost, the Product or any part of the Product that it determines to be defective, for the original purchaser (**you**).
4. **Replacement products and parts:** Hisense can, at its option, choose to repair or replace the defective Product or any part of the Product with a product/part of like kind and quality. **Replacement products and parts may be new or reconditioned** of like kind and quality, and may cost less than the original Product purchased. No charges or refunds will be made based on the replacement Product or part cost difference.
5. **Service Coverage Area:** If the Product is located within 25km of an Authorised Retailer (**Service Coverage Area**) then the Warranty will cover the reasonable costs of transportation or travel expenses to and from that location.
6. **Plumbed Products:** Products that require external plumbing (**Plumbed Products**) must be installed by a licensed plumber, as per manufacturer's recommendations.
7. **Australian Consumer Laws (Australian customers):** Our goods come with guarantees that cannot be excluded under the Australian Consumer Laws. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
8. **Consumer Guarantees Act 1993 (CGA):** If you are purchasing the Product for personal use, then the Warranty applies in addition to your rights under the CGA. If you are purchasing the Product for business purposes, then the Warranty will apply but you agree that the CGA will not apply.

How long does the Warranty last for?

9. Subject to clause 10, the applicable Warranty Period is **36 months** from the date of purchase shown on the original invoice (**purchase date**), except where the Product has been purchased or used for business purposes and Hisense reasonably determines (at its discretion) that there has been excessive or abnormal use of the Product, in which case the applicable Warranty Period is **12 months** from the purchase date.
10. The Warranty Period for the replacement of parts in the inverter motor of washing machines is extended to 11 years in total (**Inverter Motor Parts Warranty**). The Inverter Motor Parts Warranty excludes labour costs and control boards.
11. The Warranty is automatically **voided** if:
 - a. the Product's original serial number is removed, damaged or modified;
 - b. the original purchaser sells, transfers or rents the Product to another person;
 - c. there is any unauthorised access to the internal hardware or firmware of the Product; or
 - d. you fail to pay any money owed in relation to any non-Warranty work on the Product that has been requested by you.

What is not covered by the Warranty (exclusions)?

12. The Warranty does not apply to:
 - a. any **damage or failure** caused by:
 - i. use that is not in accordance with the Product's user guide, including not adequately servicing the Product to manufacturer recommendations;
 - ii. physical force, including any damage or failure cause by an accident, neglect, misuse, or an "act of God";
 - iii. excessive use "fair wear and tear";
 - iv. incorrect or poor installation, including installation of a Plumbed Product by a person who is not a licensed plumber;
 - v. interference from or to other products and/or sources;
 - vi. environmental conditions, including dirt, dust, rodents, insects, rust, corrosion and salt build-up;
 - vii. overheating due to incorrect positioning of the Product (for example inadequate provision for ventilation and a dust-free environment, or incorrect drainage); or
 - viii. power surges or spikes, or to other unspecified sources, incorrect power current, voltage fluctuation, amperage fluctuation, rust or corrosion;
 - b. any costs associated with **repairs carried out by a person who is not a company or person that is authorised by Hisense to service the Product**, including the costs of removing and installing any internal components of the Product;
 - c. any costs relating to the **installation or maintenance** of the Product or any connected equipment;
 - d. the cost of **replacing consumables** (for example bulbs/globes and batteries);
 - e. **cosmetic or structural items** (for example shelves and doors); or
13. **Non-Warranty repairs:** Repairs or services that are outside the terms of the Warranty can be carried out at your request and cost. Costs and payment methods will be agreed prior to the commencement of any non-Warranty repairs.
14. **No loan products:** Hisense does not provide loan products or equipment under the Warranty.

Making a claim under the Warranty

15. **Warranty Claims Procedure:** The Warranty Claims Procedure is overleaf. To make a claim under the Warranty, you must provide proof of original purchase (invoice) and ensure that the original serial number is attached to the Product. You may be charged a **call-out fee of AUD125 or NZD125 (as applicable) including GST** if you do not provide proof of original purchase, or the original serial number is not attached.
16. **Hisense liability:** Hisense accepts no liability for any loss or damage: (a) to any items that are lost, damaged, or stolen as a result of freight, transport or storage; (b) to third party hardware or software; (c) to programs, data or information stored on the Product or any media; or (d) arising from loss of use, loss of profits or revenue, or for any resulting indirect or consequential loss or damage.

What happens if no defect is found?

17. **No Fault Found Fee:** If Hisense determines, acting reasonably, that the Product does not contain a defect, or the repair or fault is not covered by the Warranty, then you will be charged a "No Fault Found Fee" of **at least AUD125 or NZD125 (as applicable) including GST**. Additional charges may apply for third party device configuration.

WARRANTY CLAIMS PROCEDURE

Please retain this portion for your records

36 MONTHS REPAIR WARRANTY*

Upon calling the Hisense Warranty centre, you will be issued a JOB NUMBER, along with the details of your nearest Hisense Authorised Service Centre.

**11 years for the replacement of parts in the inverter motor of washing machines, excluding labour costs and control boards – refer to clause 10 of the Fridge, Washing Machine & Dryer Manufacturer's Warranty – Australia & New Zealand.*

Any questions call our hotlines

PLEASE REFER TO THE TROUBLESHOOTING GUIDE AT THE END OF USER MANUAL

Service Procedure

When calling, please be in front of the product and ensure you have:

- 1. Proof of purchase;**
- 2. The Product's serial number; and**
- 3. The physical address where the Product is located.**

You are required to fax or email a copy of your original invoice prior to your Warranty claim being processed.

Australia

Call **1800 447 367** between **8:30AM – 7:00 PM Mon. to Fri. and 9AM – 5PM Sat and Sun** exc public holidays.

Email service.au@hisense.com

New Zealand

Call **0800 447 367** between **8:30AM – 7:00 PM Mon. to Fri. and 9AM – 5PM Sat and Sun** exc public holidays.

Email service.au@hisense.com

Hisense